



QUICK REFERENCE
J3 BACK GUIDE

J3

OVERVIEW



- STEP 1 Contour Depth
- STEP 2 Level of Support
- STEP 3 Back Support Height
- STEP 4 Backrest Width
- STEP 5 Mounting Hardware

For a custom-fit J3 Backrest, follow this 5-Step Guide to determine your **J3 Smart Part Number.**

The part number that is generated over the next several pages is for illustrative purposes. Actual part numbers may vary.

J3	-	-	-	-	-
J3 PART NUMBERS BEGIN WITH "J3"	STEP 1	STEP 2	STEP 3	STEP 4	STEP 5

STEP 1

CONTOUR DEPTH

Backrests shown
from top view.



Posterior (PA)




Posterior
Lateral (PL)



Posterior Deep
Lateral (PDL) &
Posterior Deep
Contour (PDC)



Step 1 will determine Contour Depth.
How much lateral support is needed: Posterior,
Posterior Lateral, Posterior Deep Lateral or Posterior
Deep Contour?

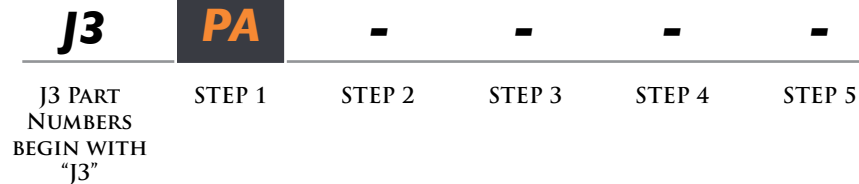

STEP 2

LEVEL OF SUPPORT

Each individual, depending on their functional needs and level of trunk stability, requires a different level of support.



Shoulder Height (SH)

Upper Thoracic (UT)

Mid Thoracic (MT)

Lower Thoracic (LT)

Step 2 will determine Level of Support.
Choose from Lower Thoracic up to
Shoulder Height.

J3	PA	UT	-	-	-
J3 PART NUMBERS BEGIN WITH "J3"	STEP 1	STEP 2	STEP 3	STEP 4	STEP 5

STEP 3

BACK SUPPORT HEIGHT

Within each level of support (Step 2), we offer short, medium, and tall height options to accommodate differences in the user's torso height.



Short (S)



Medium (M)




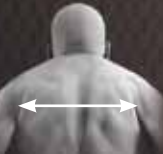

Tall (T)

In **Step 2** the user's Level of Support is chosen. Each of these support levels are offered in three Back Support Heights: Short, Medium, or Tall (**Step 3**).

J3	PA	UT	M	-	-
J3 PART NUMBERS BEGIN WITH "J3"	STEP 1	STEP 2	STEP 3	STEP 4	STEP 5

STEP 4

BACKREST WIDTH

			
	Posterior	Posterior Lateral	Posterior Deep Lateral & Posterior Deep Contour
Width	12 14 16 18 20 22 24 26	12 14 16 18 20	14 16 18 20
Chair Back Cane Width <i>Based on outside back cane to outside back cane.</i>	12 14 16 18 20 22 24 26 to to to to to to to to 14 16 18 20 22 24 26 28	12 14 16 18 20 to to to to to	14 16 18 20 to to to to
Trunk Width <i>Measure the widest part of the trunk supported by the back.</i>	11 13 15 17 19 21 23 25	9.5 11.5 13.5 15.5 17.5	11 13 15 17

Step 4 will determine the Backrest Width. Measure the widest part of the trunk covered by the back. Reference the chart to the left to select which width works best for the user.

J3	PA	UT	M	18	-
J3 PART NUMBERS BEGIN WITH "J3"	STEP 1	STEP 2	STEP 3	STEP 4	STEP 5

STEP 5

MOUNTING HARDWARE



Standard (SH)
Standard Hardware offers 1 1/2" posterior depth adjustment and may be required to achieve a maximum recline angle (22 degrees) without impacting seat depth.



Extended (AH)
Extended Hardware offers an additional 1 1/2" of posterior depth for a total of 3" of adjustability.



LITE Mount™ (LM)
Ultralightweight permanent mount hardware.



4-Point hardware (FS or FA)
Increased stability supports more force, 500 lb. weight capacity with hardware and over 22" wide shells. (FS hardware shown here)

In **Step 5** we'll select our mounting hardware. All backs accept Standard Adjustable Hardware or Extended Adjustable Hardware.

LITE Mount Hardware available on LT and MT support levels and Short (S) and Tall (T) support heights. 4 point hardware available on the UT and SH support levels.

J3	PA	UT	M	I8	SH
J3 PART NUMBERS BEGIN WITH "J3"	STEP 1	STEP 2	STEP 3	STEP 4	STEP 5

RECAP

EXAMPLE SMART
PART NUMBER

Example Smart Part Number: **J3PAUTM18SH**

- STEP 1 — **J3** J3 Back
- STEP 1 — **PA** Posterior support, meets 25mm posterior contour.
- STEP 2 — **UT** Designed for supporting the back through the upper thoracic spine.
- STEP 3 — **M** Medium height back in the upper thoracic support position.
- STEP 4 — **18** Designed to fit wheelchairs 18-20 inches in width.
- STEP 5 — **SH** Standard adjustable attaching hardware.

Let's **Recap** how we obtained our
J3 Smart Part Number.

*This part number is for illustrative purposes.
Actual part numbers may vary.*



Spine-Align Kits


Spine-Align Mini Kit I



Spine-Align Mini Kit II



Spine-Align Components

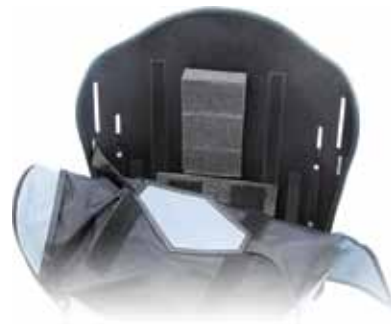

The components slip between the shell and the cover. It is not necessary to open the foam cover.



Small Lumbar



Large Lumbar



Lateral Shim



Posterior/
Lateral Pelvic



Wedge



Curved Shim



Flat Shim



Small Bean Bag




Large Bean Bag

Headrest Pads



Headrest Mounting Hardware

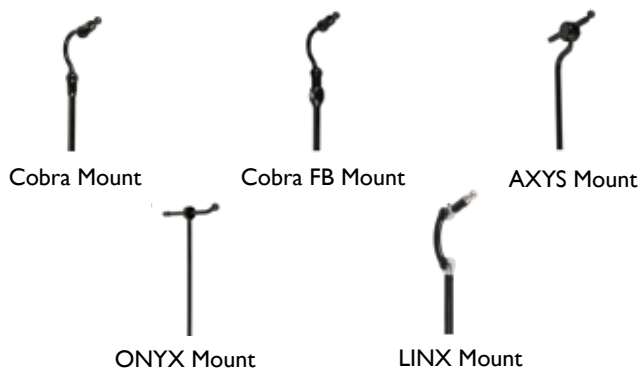

Laterals



Fixed Lateral



Angle adjustable
Swing-Away Laterals



CradleU Lateral

Chest Strap Harness



Vanity Flap





For more information, please call 1-800-333-4000

© 2010 Sunrise Medical. Sunrise Medical and JAY® are trademarks of Sunrise Medical.



800-333-4000 In Canada 800-263-3390
www.SunriseMedical.com

© 07.2013 Sunrise Medical (US) LLC
105206 Rev. E